

Drop-in Self-Leveling Dispensers

Open, Shielded and Heated, ADA Height

Models

400025, 400525, 400625, 400725, 400825, 400925, 401025
 401125, 401225, 500025, 500525, 500625, 500725, 500825
 500925, 500925, 501025, 501125, 501225, 600025, 600525
 600625, 600725, 600825, 600925, 600925, 601025, 601125
 601225



Model 400925
Open



Model 500925
Shielded



**Dispensing Level Is Easily Adjusted
By Attaching Or Detaching Springs;
No Tools Required**

Features

- Models available to fit plates from 5" to 12 1/4".
- Overall height to ring of 25"
- All models have a 22" stacking capacity.
- Easy-Glide™ design provides quiet, non-stick operation
- Heated dispensers feature thermostatic control. Thermostat minimum 100°F (38°C) - maximum 175°F (79°C)
- High-strength stainless steel uprights

Benefits

- Overall height allows for fit into ADA height-compliant counters
- Spring tension adjustment assures convenient dispensing height

Specifications

Unit shall be of welded stainless steel construction. Dispensers shall hang from surface opening by an 18-gauge flange ring and feature three each 22-gauge vertical side supports welded to 20-gauge bottom plate. Overall height from flange ring to base of 25" shall allow for fit into ADA height-compliant counters. Self-leveling dish carriage shall be of welded stainless steel construction and shall travel vertically in dispenser tube with nylon guides for smooth operation. Carriage shall have 22-gauge removable dish platform. Unit shall feature flange mounted perimeter extension springs, which are detachable from the dish carriage to provide adjustment without tools for different weight dishes. Unit shall have a vertical stacking capacity of 22". Unit shall be NSF listed.

Heated Models Only: Unit shall be 120 VAC 60 Hz and shall have 5' power supply cable with L15-5P NEMA twist lock plug for 120 VAC. Dispenser tubes shall be fully enclosed in 22-gauge stainless steel, and have a circular bottom mounted 300 or 450 watt heater element to provide convection heat. Heating system shall feature thermostatic control in a tamper protective location with safe high-end shut-off. Control shall have Infinite settings between low and high temperature cut-outs. Thermostat shall be field adjustable for average interior air temperature between 100° F (38° C) and 175° F (79° C) at middle adjustable thermostatic setting. On-off switch and power indicator light shall be mounted on top flange of dispenser. Average dish temperature rise of 40° F (22° C) above ambient shall be achieved within one hour of initial heating cycle at middle adjustable thermostatic setting. Unit shall be UL listed.

Lakeside Manufacturing, Inc.

4900 West Electric Avenue • West Milwaukee, WI 53219 U.S.A.

800-558-8565 • 414-902-6400 • Fax 414-902-6446 • info@elakeside.com • www.elakeside.com/foodservice

Drop-in Self-Leveling Dispensers


Open, Shielded and Heated, ADA Height

Models

400025, 400525, 400625, 400725,
400825, 400925, 400925, 401025,
401125, 401225, 500025, 500525,
500625, 500725, 500825, 500925,
500925, 501025, 501125, 501225,
600025, 600525, 600625, 600725,
600825, 600925, 600925, 601025,
601125, 601225

Optional Accessories

- Stainless steel dispenser tube covers
- 208/240 VAC 60Hz (heated models)
- 220 VAC 50 Hz (heated models)

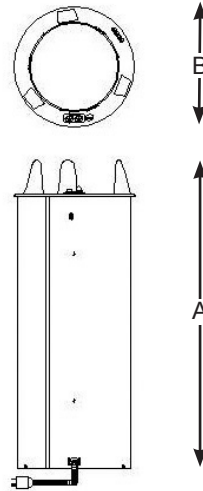

AutoCAD drawings available through KCL CADalog

Dimensions

Model	Accommodates Plate Size		Height To Ring (A)		Top Ring Diameter (B)		Counter Cut-Out		Electrical		lbs.	(kg.)
									Watts	Amps		
Open Models												
400025	Up to 5"	Up to (127)	24-3/4"	(629)	8-1/4"	(210)	7-7/16"	(189)	_	_	10	(4.5)
400525	5-1/8" to 5-3/4"	(130 to 146)	24-3/4"	(629)	9"	(229)	8-3/16"	(208)	_	_	11	(4.9)
400625	5-7/8" to 6-1/2"	(149 to 165)	24-3/4"	(629)	9-3/4"	(248)	8-15/16"	(227)	_	_	12	(5.4)
400725	6-5/8" to 7-1/4"	(168 to 184)	24-3/4"	(629)	10-1/2"	(267)	9-11/16"	(246)	_	_	12	(5.4)
400825	7-3/8" to 8-1/8"	(200 to 206)	24-3/4"	(629)	11-3/8"	(289)	10-9/16"	(268)	_	_	12	(5.4)
400925	8-1/4" to 9-1/8"	(210 to 232)	24-3/4"	(629)	12-3/8"	(314)	11-9/16"	(294)	_	_	15	(6.8)
401025	9-1/4" to 10-1/8"	(235 to 257)	24-3/4"	(629)	13-3/8"	(340)	12-9/16"	(319)	_	_	16	(7.3)
401125	10-1/4" to 11"	(260 to 279)	24-3/4"	(629)	14-1/4"	(356)	13-9/16"	(344)	_	_	17	(7.7)
401225	11-1/4" to 12-1/4"	(286 to 311)	24-3/4"	(629)	15-7/8"	(403)	14-11/16"	(373)	_	_	18	(8.2)
Shielded Models												
500025	Up to 5"	Up to (127)	25"	(635)	8-1/4"	(210)	7-7/16"	(189)	_	_	15	(6.8)
500525	5-1/8" to 5-3/4"	(130 to 146)	25"	(635)	9"	(229)	8-3/16"	(208)	_	_	16	(7.3)
500625	5-7/8" to 6-1/2"	(149 to 165)	25"	(635)	9-3/4"	(248)	8-15/16"	(227)	_	_	17	(7.7)
500725	6-5/8" to 7-1/4"	(168 to 184)	25"	(635)	10-1/2"	(267)	9-11/16"	(246)	_	_	18	(8.2)
500825	7-3/8" to 8-1/8"	(200 to 206)	25"	(635)	11-3/8"	(289)	10-9/16"	(268)	_	_	20	(9.1)
500925	8-1/4" to 9-1/8"	(210 to 232)	25"	(635)	12-3/8"	(314)	11-9/16"	(294)	_	_	23	(10.4)
501025	9-1/4" to 10-1/8"	(235 to 257)	25"	(635)	13-3/8"	(340)	12-9/16"	(319)	_	_	24	(10.9)
501125	10-1/4" to 11"	(260 to 279)	25"	(635)	14-1/4"	(356)	13-9/16"	(344)	_	_	26	(11.8)
501225	11-1/4" to 12-1/4"	(286 to 311)	25"	(635)	15-7/8"	(403)	14-11/16"	(373)	_	_	29	(13.2)
Heated Models												
600025	Up to 5"	Up to (127)	25"	(635)	8-1/4"	(210)	7-7/16"	(189)	300	2.5	18	(8.2)
600525	5-1/8" to 5-3/4"	(130 to 146)	25"	(635)	9"	(229)	8-3/16"	(208)	300	2.5	19	(8.6)
600625	5-7/8" to 6-1/2"	(149 to 165)	25"	(635)	9-3/4"	(248)	8-15/16"	(227)	300	2.5	20	(9.1)
600725	6-5/8" to 7-1/4"	(168 to 184)	25"	(635)	10-1/2"	(267)	9-11/16"	(246)	300	2.5	21	(9.5)
600825	7-3/8" to 8-1/8"	(200 to 206)	25"	(635)	11-3/8"	(289)	10-9/16"	(268)	300	2.5	23	(10.4)
600925	8-1/4" to 9-1/8"	(210 to 232)	25"	(635)	12-3/8"	(314)	11-9/16"	(294)	450	3.8	26	(11.8)
601025	9-1/4" to 10-1/8"	(235 to 257)	25"	(635)	13-3/8"	(340)	12-9/16"	(319)	450	3.8	28	(12.7)
601125	10-1/4" to 11"	(260 to 279)	25"	(635)	14-1/4"	(356)	13-9/16"	(344)	450	3.8	30	(13.6)
601225	11-1/4" to 12-1/4"	(286 to 311)	25"	(635)	15-7/8"	(403)	14-11/16"	(373)	450	3.8	32	(14.5)

Measurements in () denote metric millimeters, unless otherwise specified.



Ingenuity On Wheels™

Lakeside Manufacturing, Inc.

4900 West Electric Avenue • West Milwaukee, WI 53219 U.S.A.

800-558-8565 • 414-902-6400 • Fax 414-902-6446

info@elakeside.com • www.elakeside.com/foodservice